


Installation Guide: Fence panels using posts

Step-by-step installation guide





STEP 1 Use a string line to provide a guide for the position of the posts. Mark out and dig holes for the posts. For our 90mm x 90mm post we recommend a hole 200mm circumference by 600mm depth.

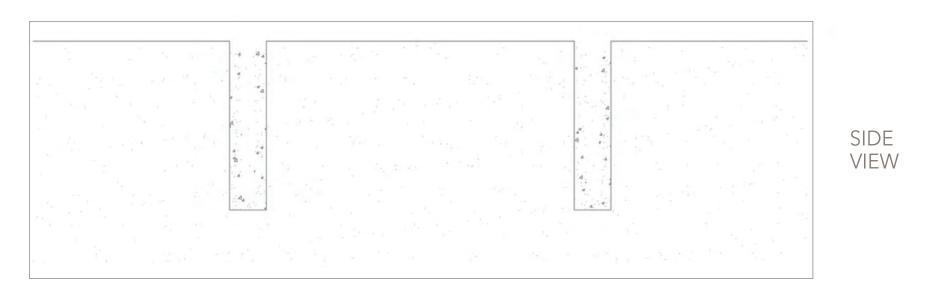


STEP 2 Insert post. Use spirit level to ensure it is level in both directions and correctly positioned against the string line. Posts need to be set at the correct width.





STEP 3 Fill the hole with post mix (use manufacturer's instructions). Adjust post into position and support until post mix sets.

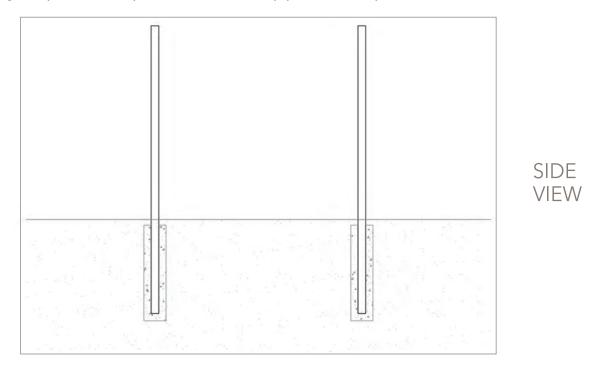


STEP 4 Please check that tops of each post are at a uniform height, unless there is a change in heights required.

STEP 5 Repeat steps 2-4 as needed. Use spirit level to check each post is at correct height for panels.





STEP 6 Screw panels into posts through the frame into the side of the post. Ensure the top of each panel is level.

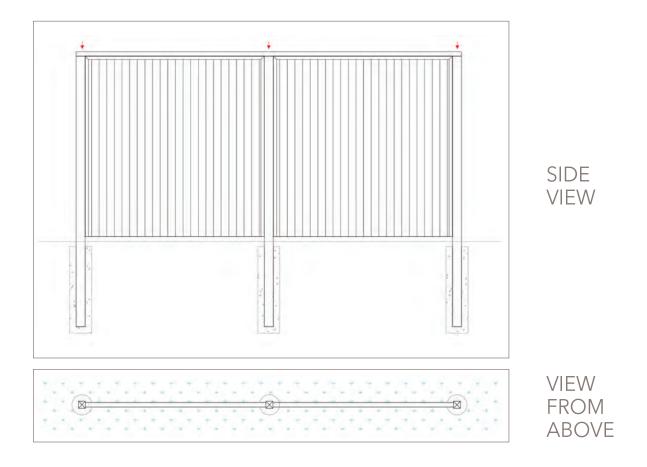

STEP 7 If installing top capping, align with front edge of post and screw down into the top of the frame.

Need help and advice about your installation, or are wanting to add planters, obelisks, log stores or seating to your design?

Call 01255 688 361 or visit www.gardentrellis.co.uk







We have a large range of matching products available to purchase online.

