

Installation Guide: Fixing Posts In Ground




**The GARDEN
TRELLIS Co.**
Est. 1992
Crafted garden joinery

1. Use a string line to provide a guide for the position of the posts.

Mark out & dig the holes for the posts. For our 90mm x 90mm post we recommend a hole 200mm circumference by 600mm depth.


2. Insert post. Use spirit level to ensure it is level in both directions & correctly positioned against the string line. Posts need to be set at the correct width.

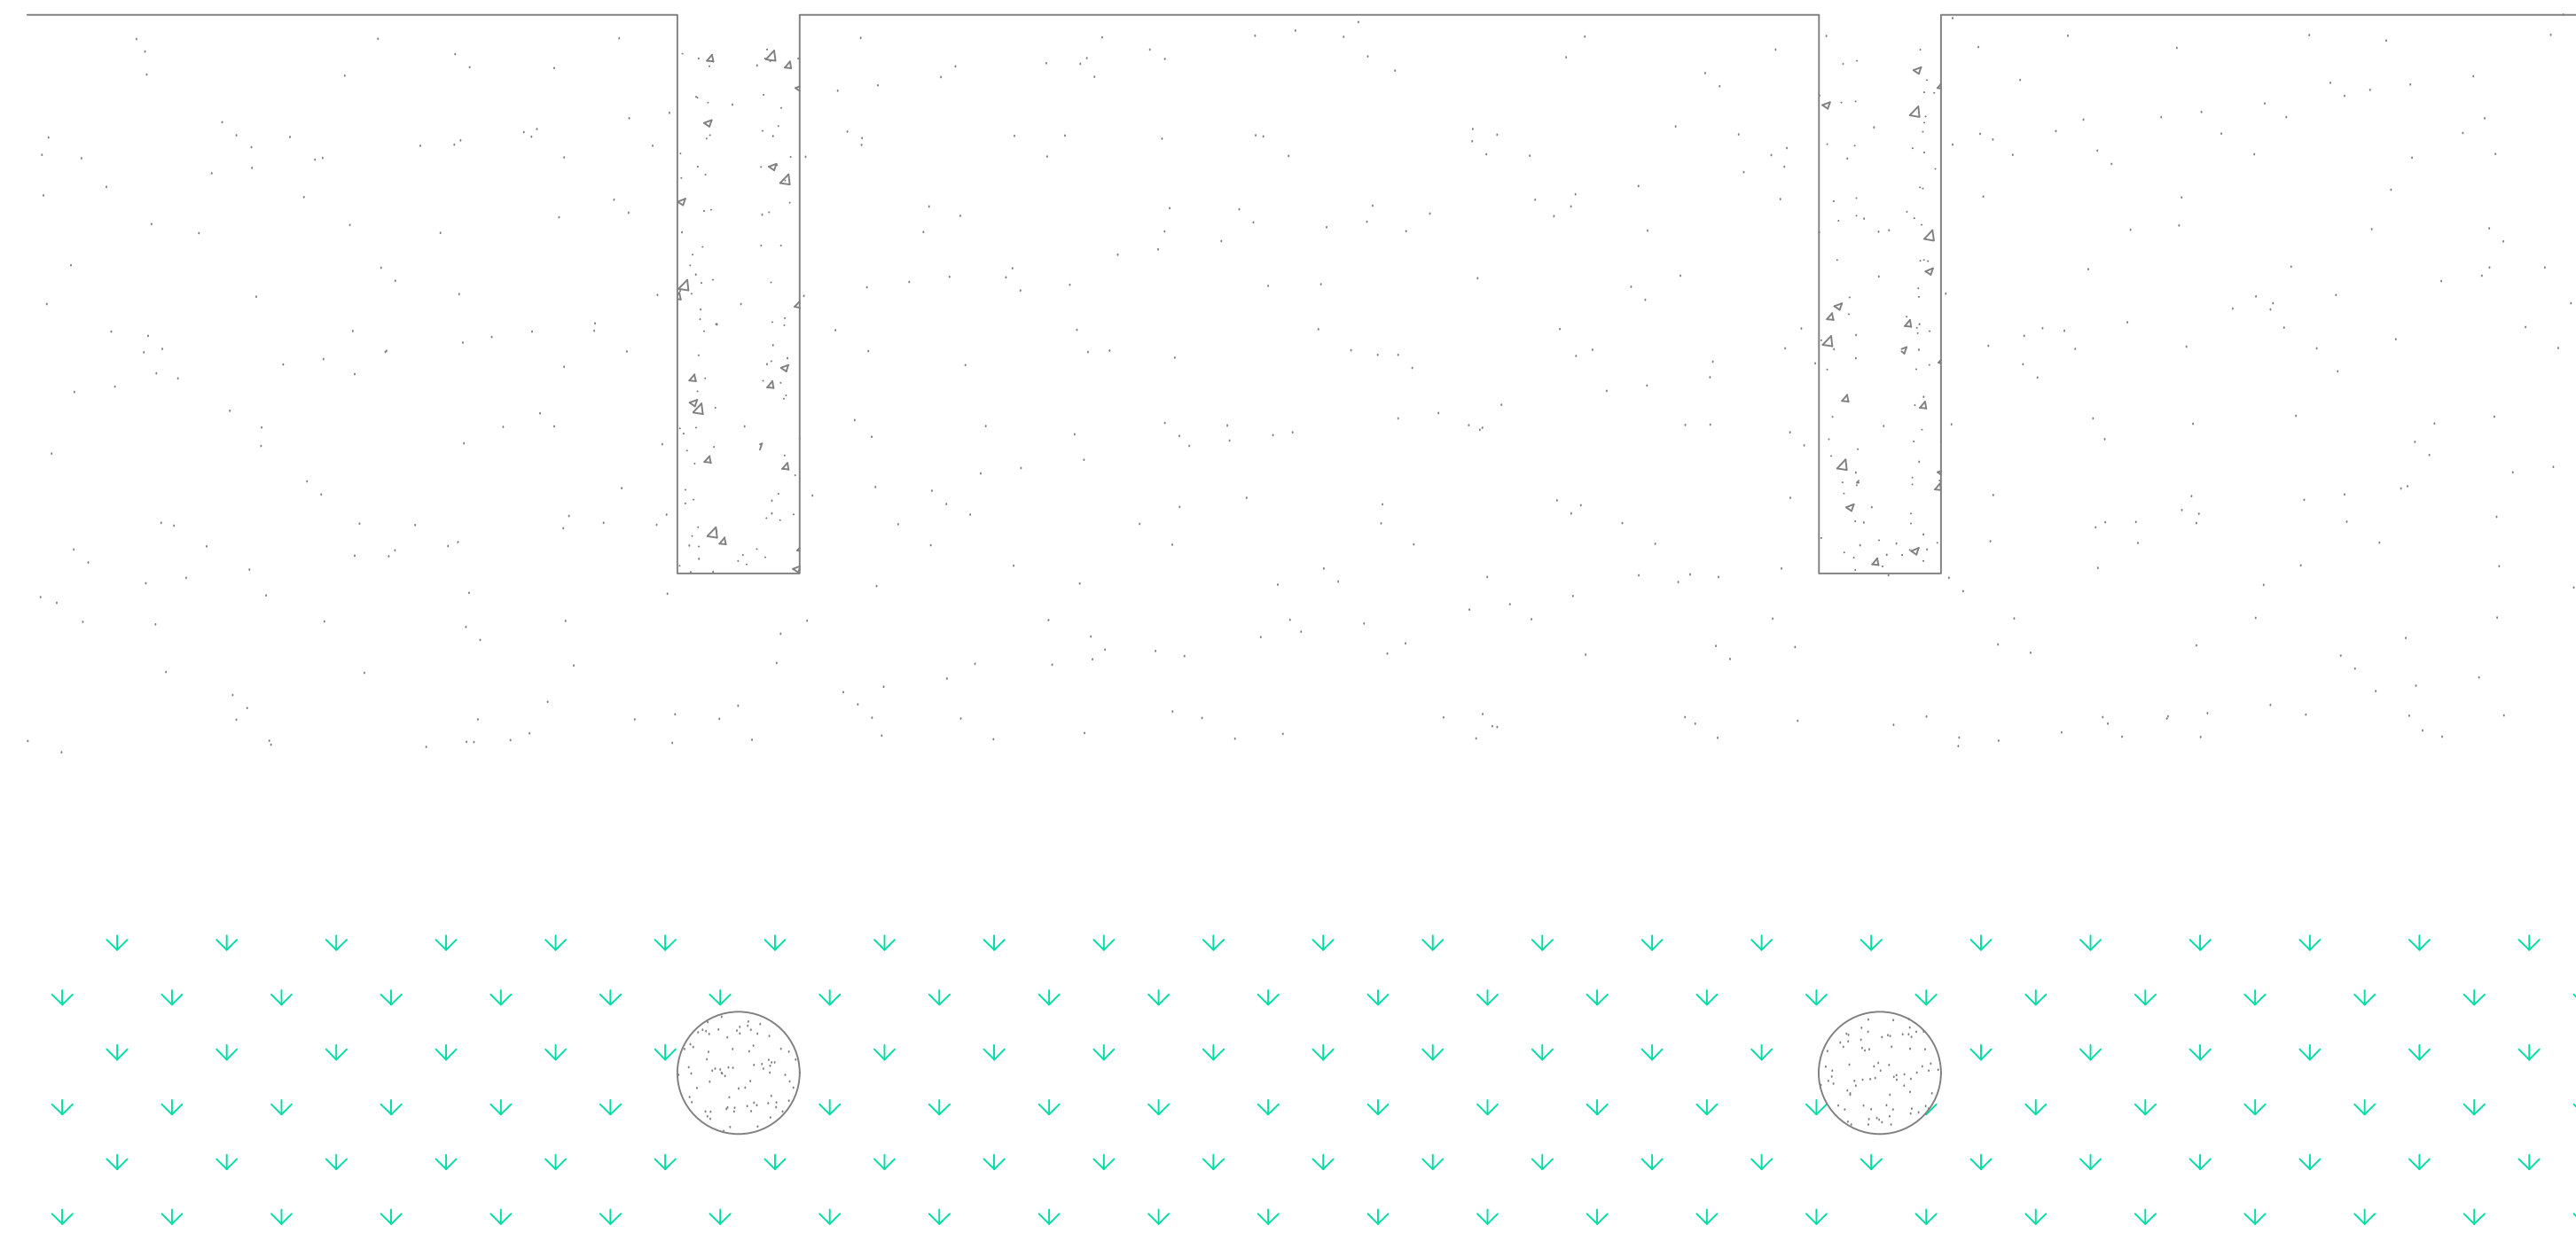

3. Fill the hole with post mix (use manufacturer's instructions). Adjust post into position and support until post mix sets.

4. Please check that tops of each post are at a uniform height, unless there is a change in heights required.

5. Repeat steps 2-4 as needed. Use spirit level to check each post is at correct height for panels.

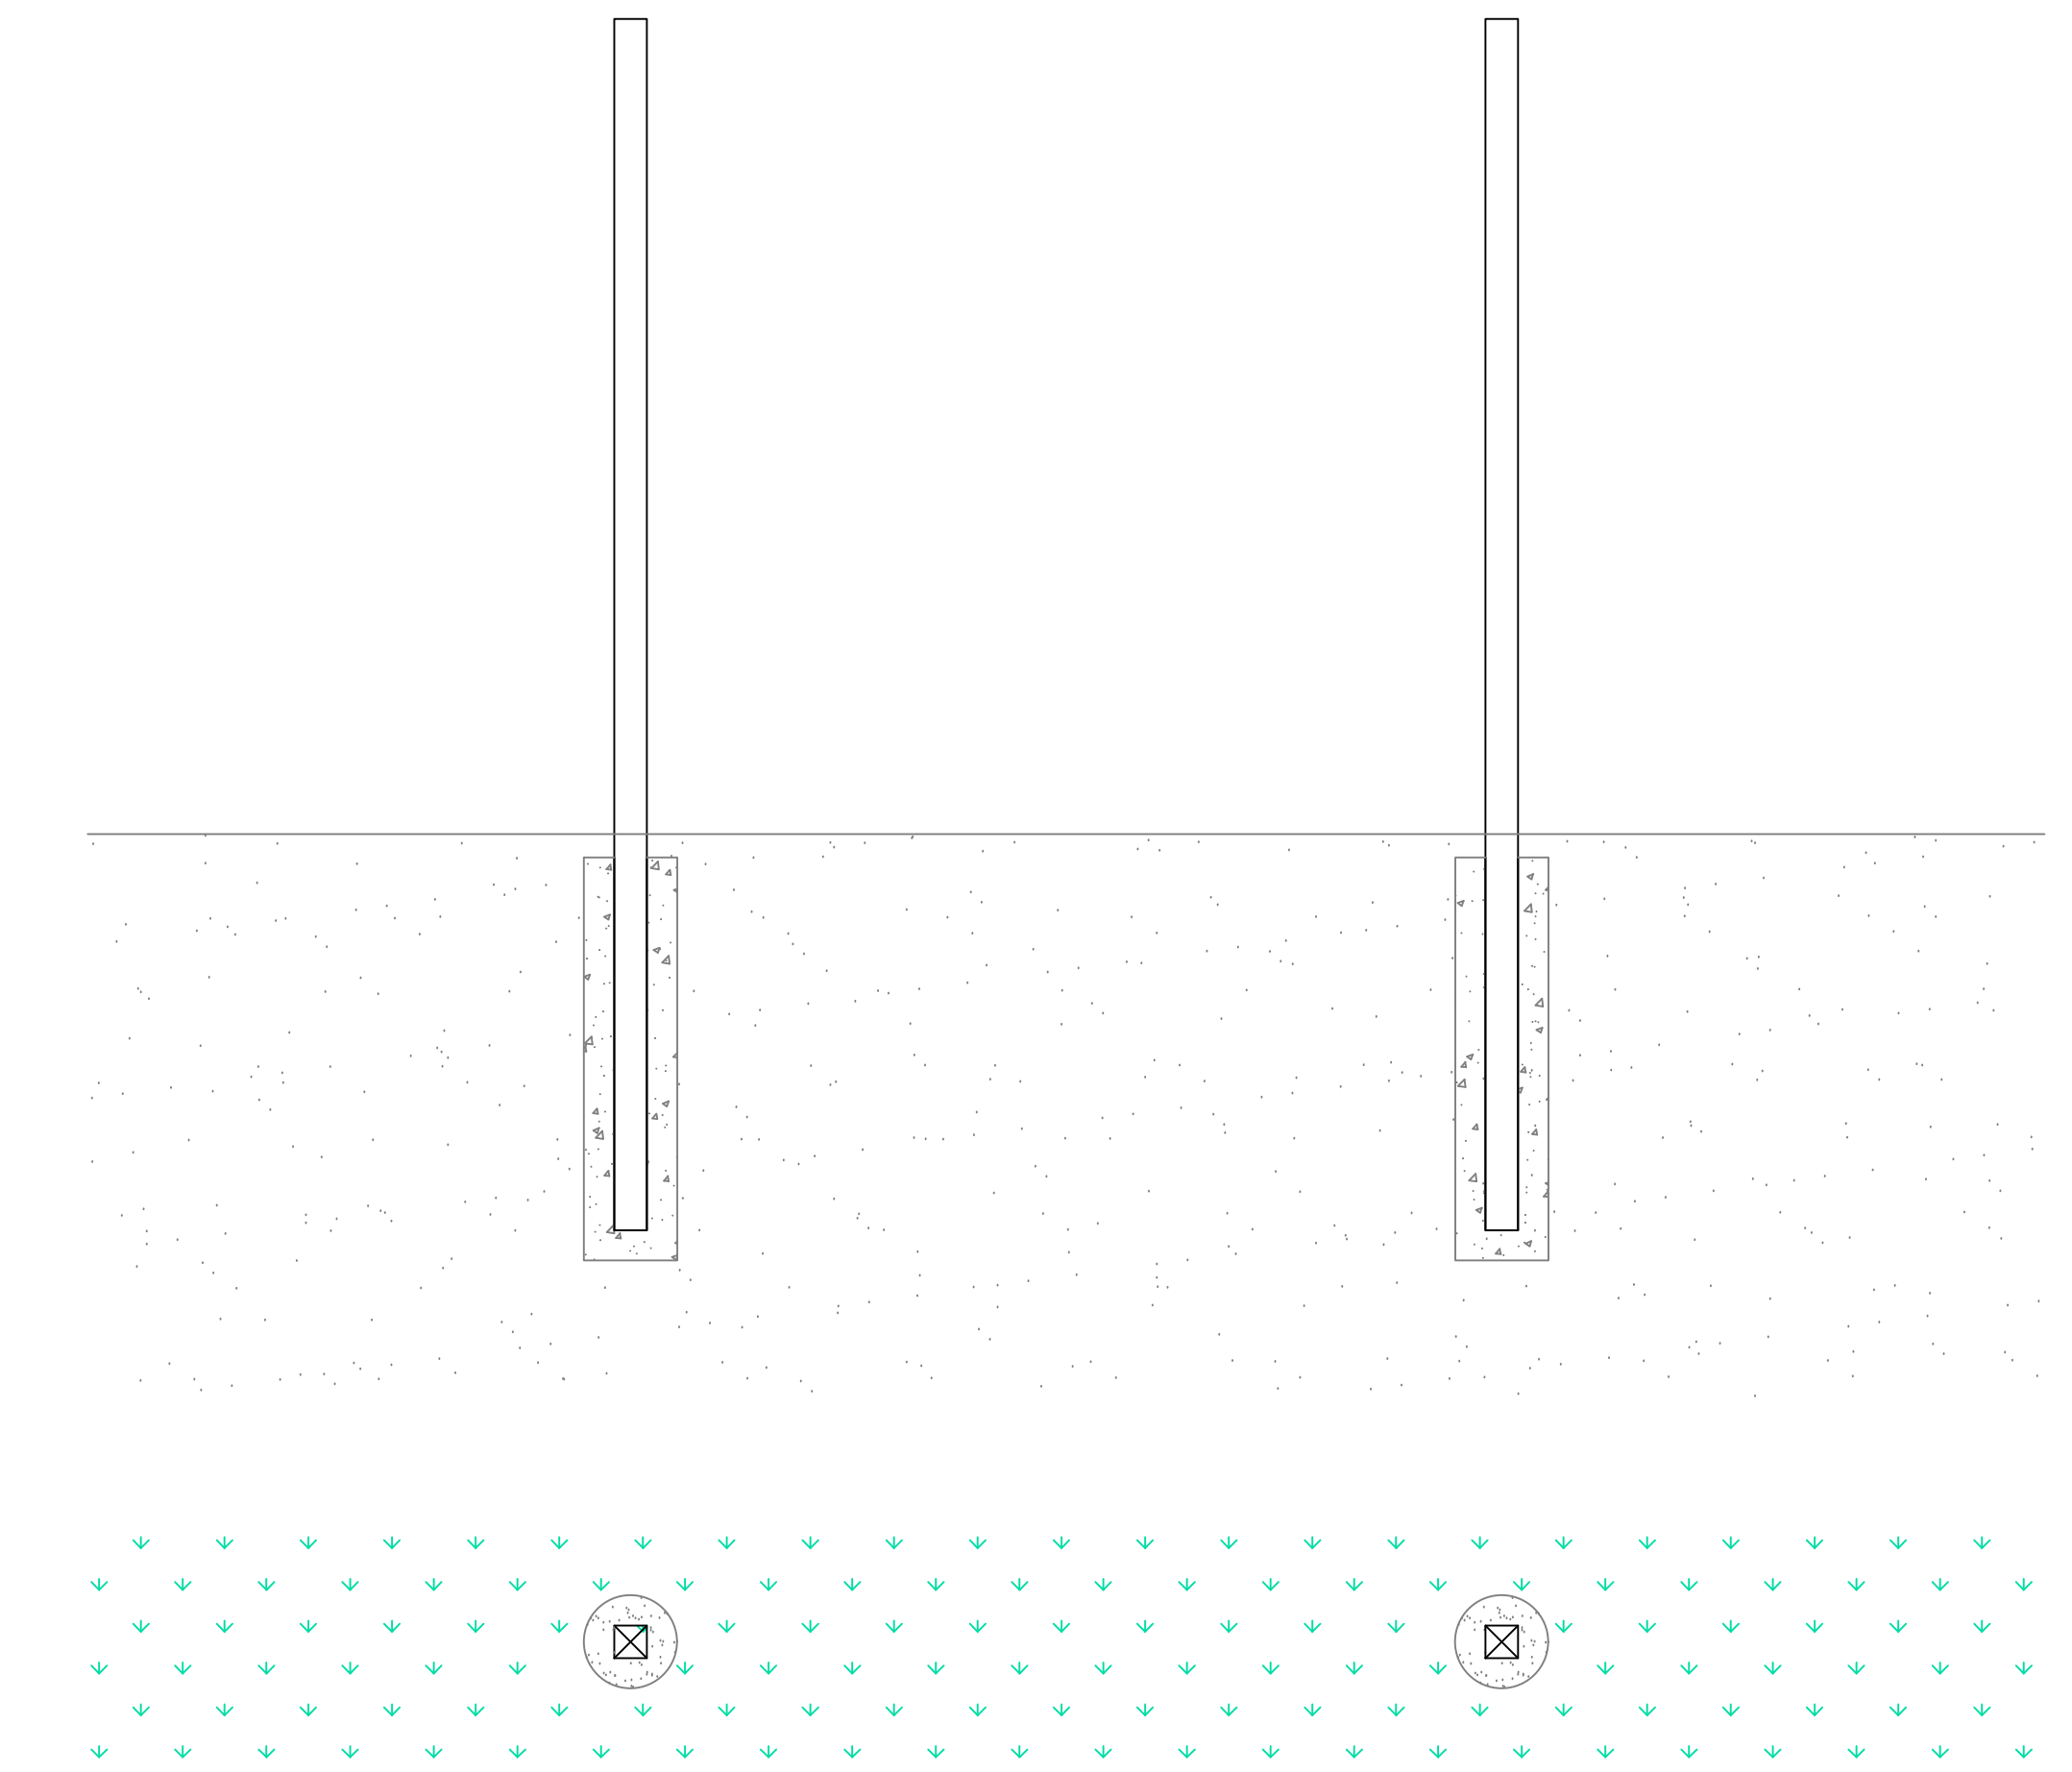

6. Screw panels into posts through the frame using 4.5mm x 70mm stainless steel screws for our solid panels, and 4.5mm x 100mm for our heavy duty panels (minimum of 3 per side into the side of the post) ensuring the top of each panel is level

7. If installing top capping, align with the front edge of the post and screw down through the capping into the top of the frame using 4.5mm/5mm x 100mm stainless steel screws (can be plugged and filled after if preferred)

